## **ROGAUGE 24.06 Gauge Bar**

## For adjusting or maintaining a defined gauge.

#### **RO**GAUGE Iso

- Insulated
- · Can be fitted simply and easily to the foot of the rail
- For rails with a base width of 125 mm to 150 mm (e.g. 49E1/54E3 and 60E1)

### **ROGAUGE Iso Flat**

- Insulated
- For slab track (spacing concrete-rail > 35 mm) and for ballasted track
- · For rails with a base width up to 160 mm
- · Also available with removable clamps

#### **ROGAUGE Iso Switch**

- Insulated
- Cropped design perfect for use in switches
- No danger of tripping due to design
- · Can be fitted simply and easily to the foot of the rail
- Can also be used on open track
- · Different versions available

#### **RO**GAUGE

- Not insulated
- Mounted to the grooved plates (K; KS track)
- Adjustment via threaded spindle when installed!

Adjustment via threaded spindle when installed. Different gauges available on request.









# **ROSHOE** 24.08 Rail Pulling Shoe

## For pulling rails in the ballast.

- For various types of rail up to a rail length of 180 m, depending on the condition of the track
- · Can be used for drilled and undrilled rails
- · Does not cause impressions or deformations of the rail

Rail profiles on request.



## **SPECIFICATION**

Dimensions (L x W x H) 455 x 216 x 280 mm

Weight approx. 39 kg

